

# CALF FEED PREPARING MACHINE USER MANUAL





## **1. Description of machine**

The calf feed preparing machine is made of stainless steel and prepares the food that required to calfs. Thanks to the propellers at the base, the food is homogeneously distributed to the machine and with the heating system it keeps the food at the required temperature.

## **2. Operating**

### **2.1. Steps to follow when machine is operating**

- Wear a grounded plug.
- Put water in your machine as much food as you want.
- Heat the water in accordance with the instructions of your food supplier. (Set the thermostat to the desired degree.)
- Start the engine when the water is warm, and slowly discharge the food. (Be careful that the chaff is in powder form.)
- Food will be completely mixed in water in 3-5 minutes.
- Set thermostat to eating temperature of calf.
- Discharge from the drain hose, which is homogenous and comes to the eating temperature. (Start the engine while discharging.)

### **2.2. Things to pay attention while machine is operating**

- The operating voltage of the machine is 220-240V AC.
- Use the machine in a 16A fuse and grounded plug. (Problems that arise when not used on grounded lines are not covered by warranty.)
- Do not use the neutral end of your installation as a ground.
- When the switch and thermostat are in the "0" position, install the device in plug.
- Do not run the machine without water.
- Put enough water in the boiler of your machine to pass the resistance.
- Set the thermostat to 60 ° C, start the engine when the water is warm. After 3 minutes, turn off the engine and drain the water.
- Rinse the machine with warm water and dry the machine with a clean cloth.

### **2.3. Useful informations**

- The food mixes homogeneously in a very short time.
- It is a multipurpose product that can be used in energy drinks and other nutrition drinks besides food.
- Hygienic, easily transportable.
- You can heat water and other liquids up to 60°C.

### 3. Teknikal features

Voltage	220V
Rotation	1450 rpm
Frequency	50 - 60 Hz
Bowl capacity	45 lt
Power	2400W
Dimensions with box	40 x 40 x 76 cm
Weight with box	13 kg

### 4. Warranty

The use of Enka Tarım's calf feeding machine as shown in the instruction manual is only necessary for the maintenance and repair of the maintenance personnel in our company to be valid under the warranty. Guaranteed for two (2) years from the date of sale against materials, workmanship and manufacturing defects provided that no maintenance or repair is carried out by anyone other than the company!

It is declared that the machine is spoiled automatically within one year starting from the date of sale and if it is verified in the inspection made by us, it is undertaken to repair it free of charge and to replace the required parts free of charge.

#### 4.1. Things to pay attention under warranty


The warranty given by Enka Tarım does not cover the repair of the fault which may arise when the machine is used abnormally or outside of its intended purpose.

- Exterior paint scratching and emulsion throwing
- Damage and failures during loading and shipping
- Malfunctions due to use errors and negligence
- Damage and failures due to voltage drop and excess, faulty electrical installation, reasons for operating at a voltage different from the operating voltage written on the machine

The elimination of the above mentioned defects is a concrete matter. The warranty is valid in the event of a defect in the scope of the warranty and no warranty can be claimed for any defects outside the warranty. Any falsification in this user manual that contains information about the warranty will void the warranty coverage.





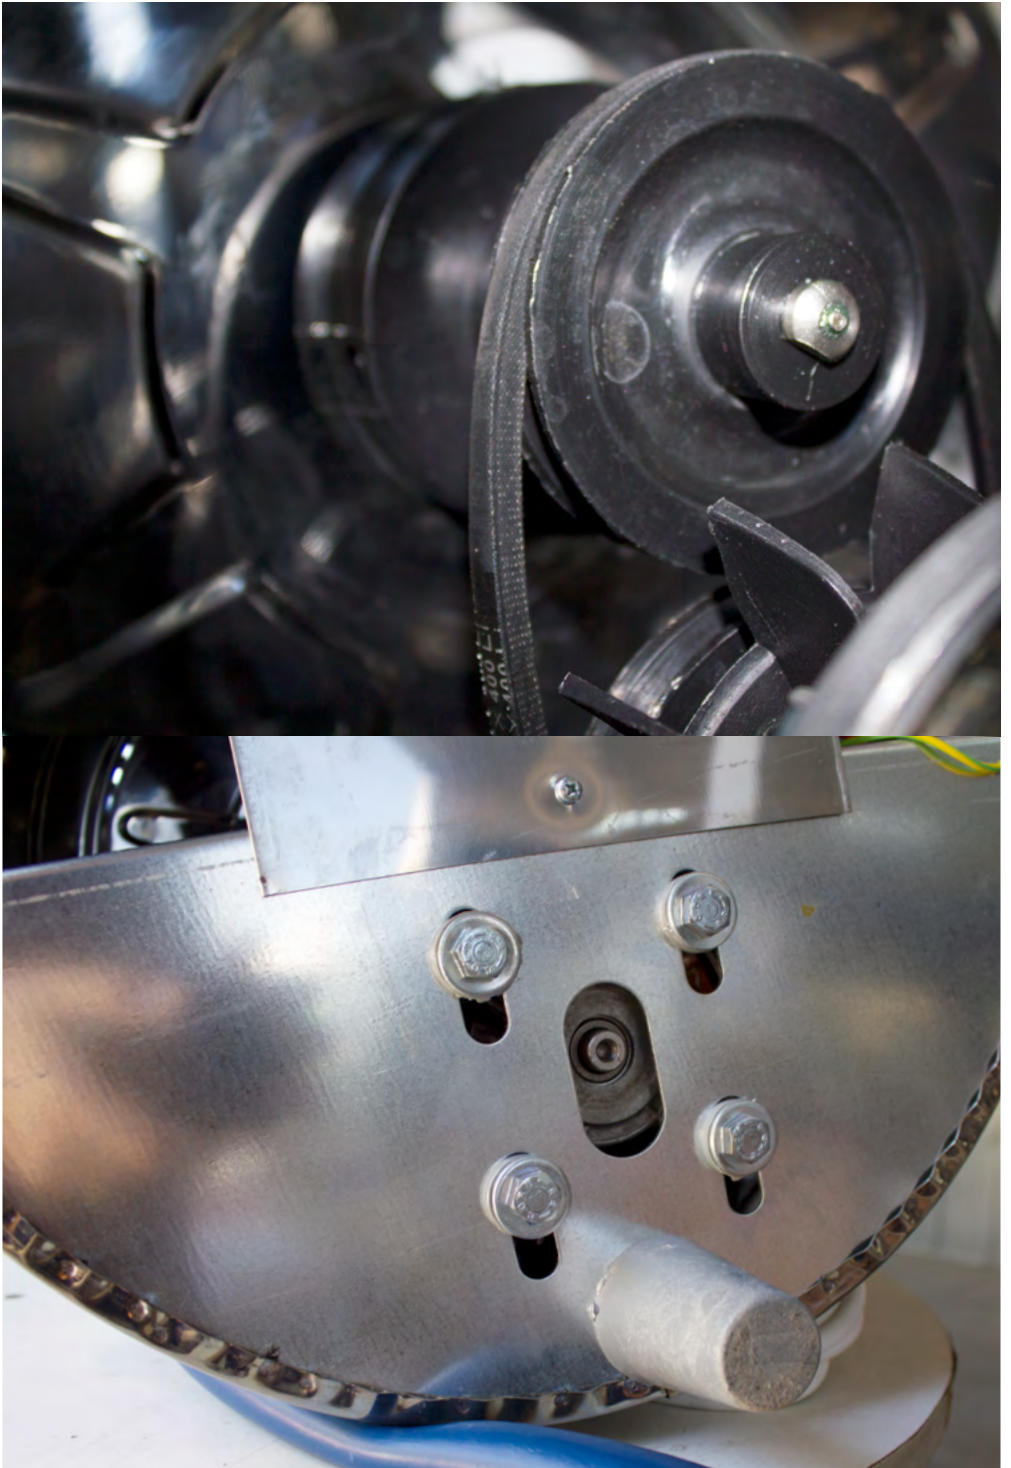







**ENKA Tarım Hayvancılık ve İnşaat Sanayi Ticaret Limited Şirketi**

**İTOB OSB. Organize Sanayi Bölgesi 10017. sokak No: 3  
35470 Tekeli / Menderes - İzmir**

**+90 232 799 00 50 / [www.enkatarim.com](http://www.enkatarim.com)**