

67012

FEED CRUSHER MACHINE



www.enkatarim.com

1. Description of machine

This machine is used to crush materials such as barley, wheat, corn, oats, and turn them into feed for livestock. Thanks to its wheeled structure, it is easily transported and easy to use.

The feed crusher provides the movement of the 178 x 295 mm long helix rollers with the movement of the electric motor, enabling them to move in opposite directions, thus compressing the grain and turning it into feed.

2. Operation

2.1. Operating stages

- Read the user manual before operating the product.
- Plug the machine into the socket and turn on the switch.
- After running the machine for about 2 minutes in an empty state, start crushing the product.
- While operating the machine, make sure that you do not have anyone other than authorized personnel around.
- After using the machine, be sure to pull the plug out of the socket.

2.2. Cleaning and maintenance

- Clean the machine with a damp cloth or sponge before washing it.
(Make sure that the electrical components do not come into contact with water.)
- The plug must be unplugged while cleaning.

2.3. Safety instructions

- Use the machine in a grounded socket.
- Only use the machine on a flat and firm surface.
- Store the machine in a dry and clean place.
- If the power cable or fuse is damaged, contact the manufacturer immediately.
- Do not move the product while the machine is running.
- The product should only be used by authorized personnel.
- In case of a possible malfunction, turn off the switch and unplug it.
- If any malfunction/problem occurs during cleaning or operation, immediately contact the manufacturer.

3. Technical features

Power	3 kW - 4Hp
Voltage	220V 50Hz
Rotation	1500 rpm
Weight	160 kg
Helix gears	178 x 295 mm
Feed input	750 x 500 mm
Feed output	280 x 100 mm
Dimensions	70 x 102 x 140 cm

Max. grain crushing capacity

Wheat	500 - 700 kg
Barley	500 - 700 kg
Corn	400 - 600 kg
Oat	500 - 700 kg
Broad bean	400 - 600 kg
Rye	600 - 800 kg

4. Failures that may occur during machine use, their causes and repair

Failure	Reason	Solution
The machine does not work.	<ul style="list-style-type: none">↘ Check the power cable.↘ Check the on/off switch.↘ Check the socket you are using.	<ul style="list-style-type: none">↘ If the power cord is broken or damaged, have it replaced by an authorized electrician.↘ If the on/off switch is damaged, have the switch replaced by an authorized electrician.Have the socket you use checked by an authorized electrician.
The helix gears do not turn.	<ul style="list-style-type: none">↘ Check the electric motor.	<ul style="list-style-type: none">↘ If there is no problem in terms of appearance or smell, contact the manufacturer immediately.↘ If a problem is not detected in the engine, make sure that no solid object enters the area of the gears and compress the gears.

5. Warranty



Provided that it is used as shown in the user manual and that it has not been interfered with for maintenance, repair or any other reason by persons other than the service personnel authorized by Enka Tarım; The mechanical parts of the machine are guaranteed for 2 (two) years against workmanship and manufacturing defects. There is no guarantee for the electric motor and its components.

There will be no demand for labor cost and replacement part cost for the operations carried out within the scope of the warranty. The time elapsed for repairs to be made within the warranty period is added to the warranty period. The repair period is a maximum of 1 month. This period starts from the date the product is delivered to our authorized service workshops or, if we do not have authorized service workshops, to our authorized dealers or to our company.

5.1. Considerations for the customer regarding the warranty

This guarantee is given; It does not cover the elimination of malfunctions that may arise from the abnormal use of the machine, and it is also out of warranty in the following cases.

- ✎ Damages and malfunctions caused by usage errors
- ✎ Damages and malfunctions during transportation
- ✎ Damages and malfunctions caused by low or excess voltage, faulty electrical installation, using a voltage different from the voltage written on the product label
- ✎ Defects caused by using the product contrary to the terms in the user manual.
(Damages that may arise from the entry of metal parts such as stones, sticks, wires, nails, and foreign objects into the machine, other than the feed)
- ✎ Malfunctions and damages that may occur due to fire and lightning.

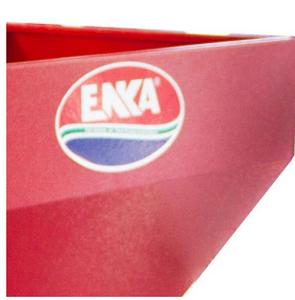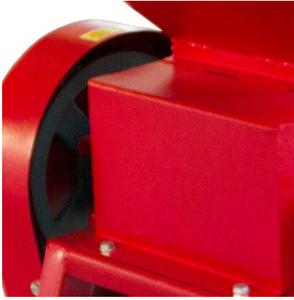

67012

Feed Crusher Machine



Enka Tarım Hayvancılık

İnşaat Sanayi Ticaret Ltd Şti

İTOB OSB 10017. sk No: 3 - 5 35470 Tekeli - Menderes - İzmir / TÜRKİYE

Tel: +90 232 799 00 50 **Fax:** +90 232 799 01 57

Web: www.enkatarim.com **E-mail:** info@enkatarim.com