60102

GRASS SHREDDER MACHINE



www.enkatarim.com

1. Description of machine

This machine shredds materials such as grass, straw, hay and twigs into small pieces. Thanks to its wheeled structure, it is easily transported and easy to use.

2. Operation

2.1. Operating stages

- Read the user manual before operating the product.
- Plug the machine into the socket and turn on the switch.
- After running the machine for about 2 minutes in an empty state, start to put products to machine.
- f w While operating the machine, make sure that you do not have anyone other than authorized personnel around.
- \mathbf{v} Never insert your arm into the chamber while operating the machine.
- \mathbf{v} Thanks to the sensor we use; the machine will not start when you separate the chamber from the body for cleaning or anything.
- After using the machine, be sure to pull the plug out of the socket.

2.2. Cleaning and maintenance

ע Clean the machine with a damp cloth or sponge before washing it.

(Make sure that the electrical components do not come into contact with water.)

 \mathbf{v} The plug must be unplugged while cleaning.

2.3. Safety instructions

- $\ensuremath{\mathbf{u}}$ Use the machine in a grounded socket.
- ע Only use the machine on a flat and firm surface.
- $\ensuremath{\mathbf{z}}$ Store the machine in a dry and clean place.
- ${f u}$ If the power cable or fuse is damaged, contact the manufacturer immediately.
- ע Do not move the product while the machine is running.
- $\boldsymbol{\nu}$ The product should only be used by authorized personnel.
- ${f u}$ In case of a possible malfunction, turn off the switch and unplug it.
- f u If any malfunction/problem occurs during cleaning or operation, immediately contact the manufacturer.

3. Technical features

Power	2.2 kW - 3 kW
Voltage	220V 50Hz
Rotation	2800 rpm
Weight	80.5 kg
Dimensions	48 x 80 x 166 cm

4. Failures that may occur during machine use, their causes and repair

Failure	Reason	Solution
The machine does not work.	ע Check the power cable. ע Check the on/off switch. ע Check the socket you are using.	y If the power cord is broken or damaged, have it replaced by an authorized electrician. y If the on/off switch is damaged, have the switch replaced by an authorized electrician. y Have the socket you use checked by an authorized electrician.
The machine is jerky and runs louder than usual.	צ Check the electric motor. צ Check the blades.	ע If there is no problem in terms of appearance or smell, contact the manufacturer immediately. ע If a problem is not detected in the motor, make sure that no solid object has entered the chamber. ע Blades need to be rebalanced.

5. Warranty

Provided that it is used as shown in the user manual and that it has not been interfered with for maintenance, repair or any other reason by persons other than the service personnel authorized by Enka Tarım; The mechanical parts of the machine are guaranteed for 2 (two) years against workmanship and manufacturing defects. There is no guarantee for the electric motor and its components.

There will be no demand for labor cost and replacement part cost for the operations carried out within the scope of the warranty. The time elapsed for repairs to be made within the warranty period is added to the warranty period. The repair period is a maximum of 1 month. This period starts from the date the product is delivered to our authorized service workshops or, if we do not have authorized service workshops, to our authorized dealers or to our company.

5.1. Considerations for the customer regarding the warranty

This guarantee is given; It does not cover the elimination of malfunctions that may arise from the abnormal use of the machine, and it is also out of warranty in the following cases.

- ע Damages and malfunctions caused by usage errors
- ע Damages and malfunctions during transportation
- ע Damages and malfunctions caused by low or excess voltage, faulty electrical installation, using a voltage different from the voltage written on the product label
- ש Defects caused by using the product contrary to the terms in the user manual. (Damages that may arise from the entry of metal parts such as stones, sticks, wires, nails, and foreign objects into the machine, other than the feed)
- ${f u}$ Malfunctions and damages that may occur due to fire and lightning





Grass shredder machine



Enka Tarım Hayvancılık

İnşaat Sanayi Ticaret Ltd Şti

ITOB OSB 10017. sk No: 3 - 5 35470 Tekeli - Menderes - İzmir / TÜRKİYE

Tel: +90 232 799 00 50 Fax: +90 232 799 01 57

 $\textbf{Web:} \ www.enkatarim.com \ \textbf{E-mail:} \ info@enkatarim.com$